


Standard Fitting Instructions for Door Canopies.

**For anyone that is DIY handy fitting time is approximately 2 hours**

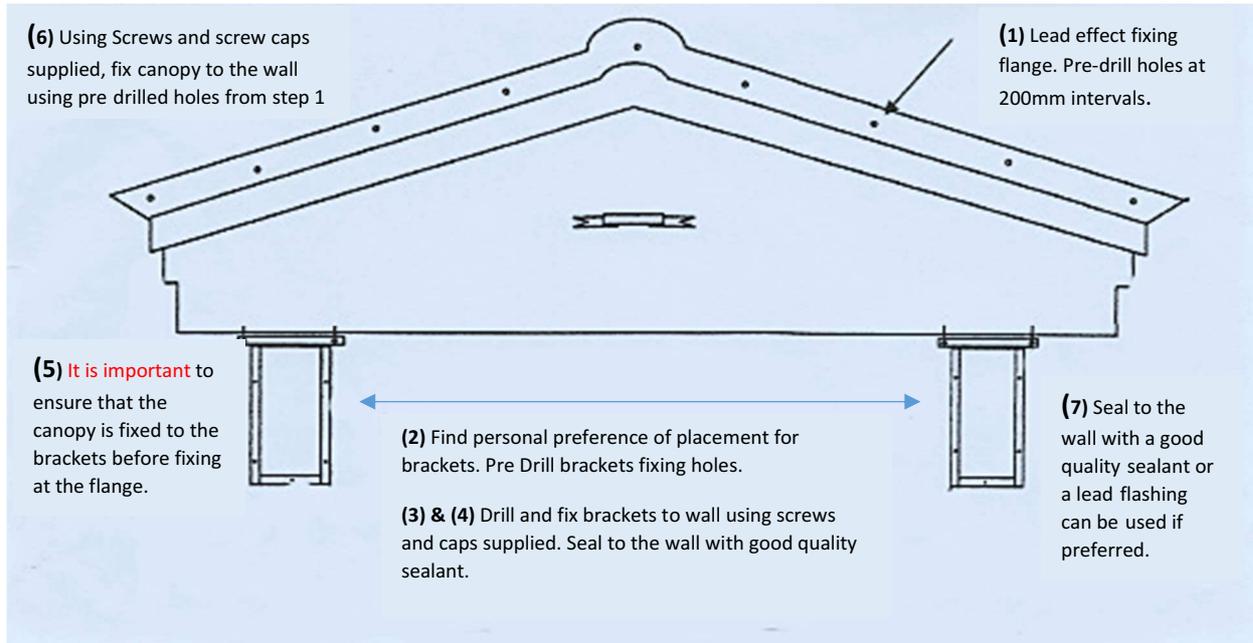

1. Mark out and pre-drill 6mm holes at approximately 200mm intervals along the canopy lead effect flange across the top of the canopy.
2. Offer canopy up to the wall and centralise it above the door opening. If brackets are to be fitted mark off the position on the wall for the bracket assembly. Pre drill bracket fixing holes. Make sure markings are straight and level.
3. Offer the bracket up to the wall at each side of the door opening. Drill and plug the wall using a 7mm masonry drill bit. Screw the bracket to the wall using the screws and screw caps supplied.
4. Lift the canopy onto the brackets and centralise over the door opening. Drill and plug the wall as before using screws and plugs supplied.
5. It is important that you fix the brackets to the canopy before fixing the flange to the wall. Screw through brackets into canopy to pull tight and seal gap with a good quality white sealant. Cover all visible screw heads with the appropriate coloured screw caps.
6. Using the screws and screw cover caps supplied fix the canopy using the pre-drilled holes in the lead effect flange to the wall (1)

## Midlands GRP Ltd

### Standard Fitting Instructions for Door Canopies.

**For anyone that is DIY handy fitting time is approximately 2 hours**

7. Finally, seal canopy to the wall with a good quality sealant or a lead flashing can also be used.

Your canopy is maintenance-free, however we recommend regular cleaning with soap and water to maintain its good looks for many years to come.

Care should be taken with the canopy before fitting as cracking or damage can occur to the surface finish if mishandled.